AUDREY

CODING
- 241363
- 241422
- 241364
- 241290
- 241291

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
A		JCBC M6 x 25mm + S/W M6 + F/W M6 x 13mm	4
B		JCBC M6 x 45mm + S/W M6 + F/W M6 x 13mm	4
C		ALLEN KEY M4	1
D		L BRACKET	4
E		CSK CB SCREW M3.5 x 12mm	8
F		WOOD DOWEL M8 x 25mm	2

ITEM	PHOTO	PARTS NAME	QTY
1		RIGHT SIDE FRAME	1
2		LEFT SIDE FRAME	1
3		FRONT STRETCHER	1
4		BACK STRETCHER	1
5		TOP REST UP	1
6		CUSHION SEAT	1

AUDREY

CODING
- 241363
- 241422
- 241364
- 241290
- 241291

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS
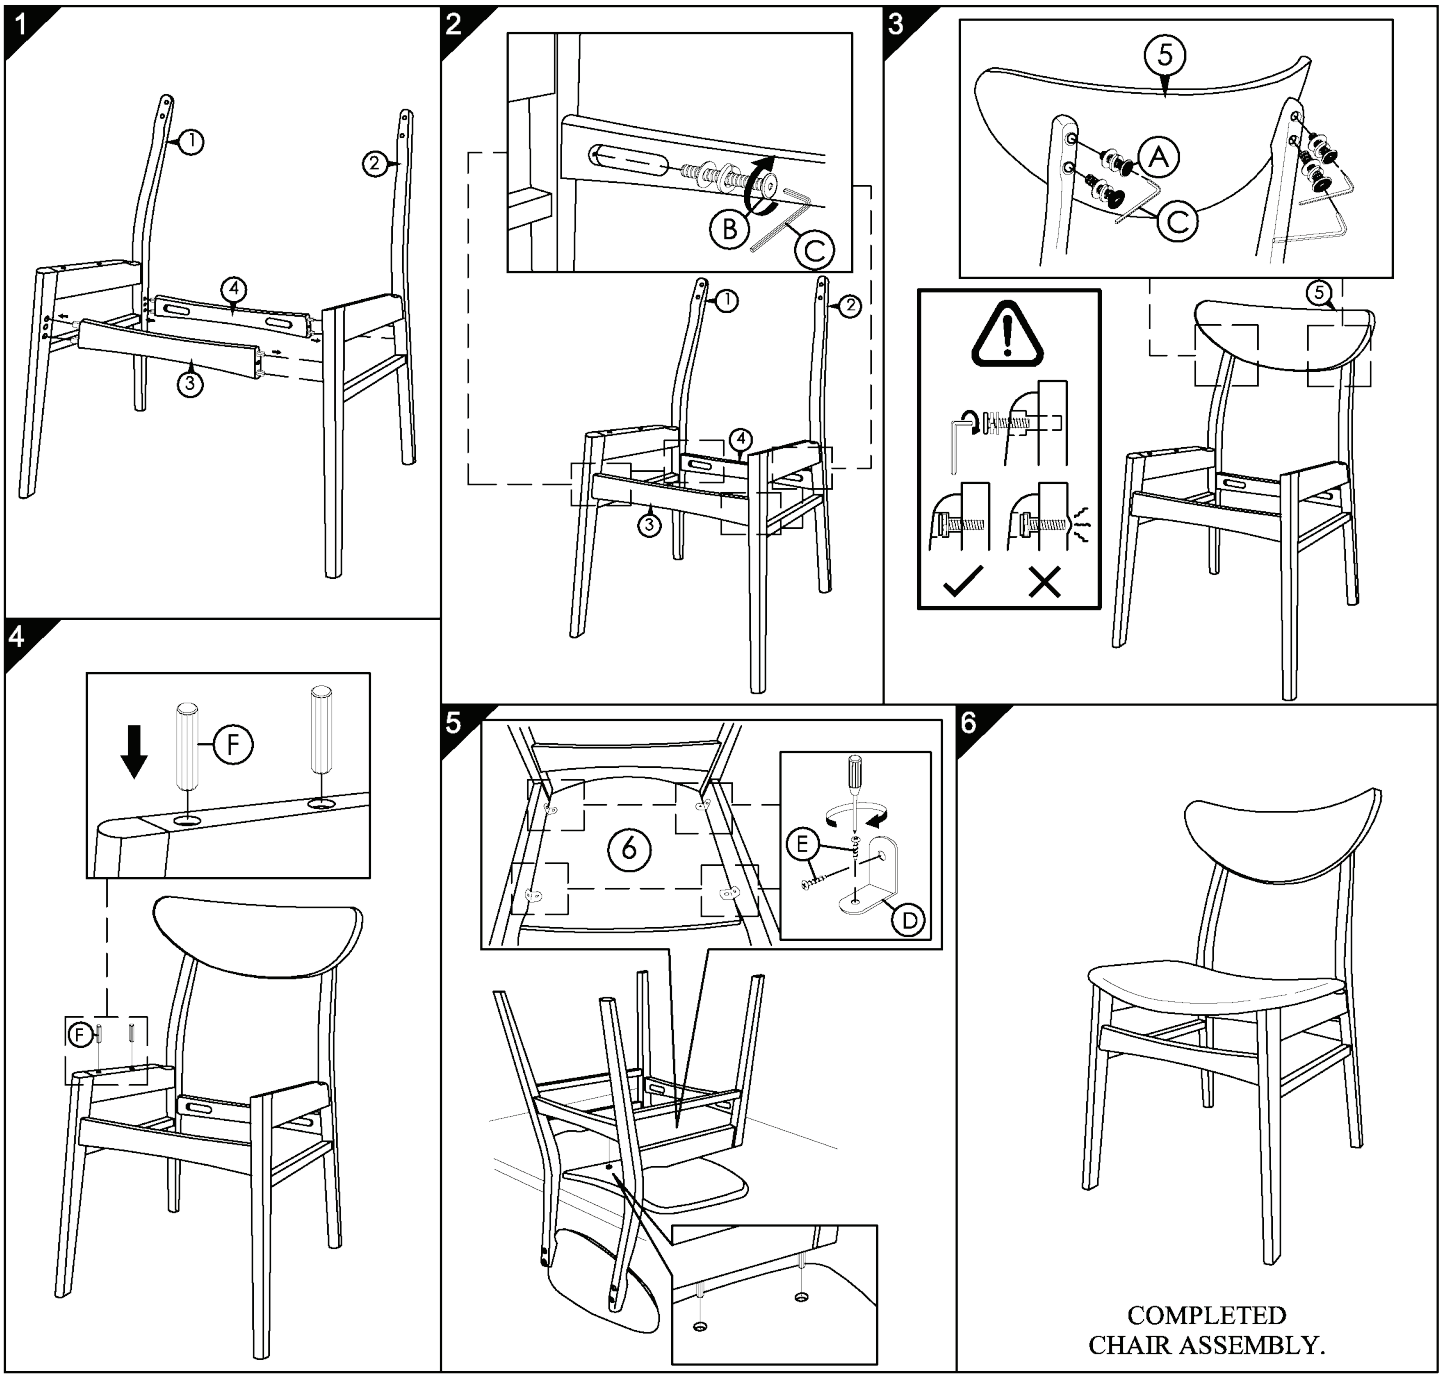
nuhoom.com