RHODES

CODING
- 332002

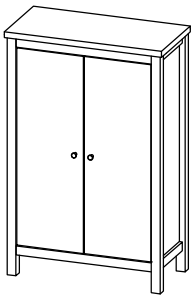

ISO 9001:2015

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE		
A	MINI FIX A1 A2 A3	12 SETS
B	M8 X 30MM WOOD DOWEL	12 PCS
C	ALLEN KEY M4	1 PC
D	M3.5 X 16MM C.B SCREW	24 PCS
E	M4 X 30MM C.B SCREW	2 PCS
F	5/8 NAIL	24 PCS
G	5/8 PVC NAIL LEG	4 PCS
H	METAL SHELF SUPPORT	16 PCS
I	STOPPER(2 PIN)	2 PCS
J	311 KNOD	2 PCS
K	SOFT CLOSING 7/8 HINGES	4 PCS
	TIPPING PACK WITH AI	2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	FRONT RAIL TOP	1 PC
6	FRONT RAIL BOTTOM	1 PC
7	BACK PANEL	1 PC
8	SHELF PANEL	4 PCS
9	DOOR PANEL	2 PCS

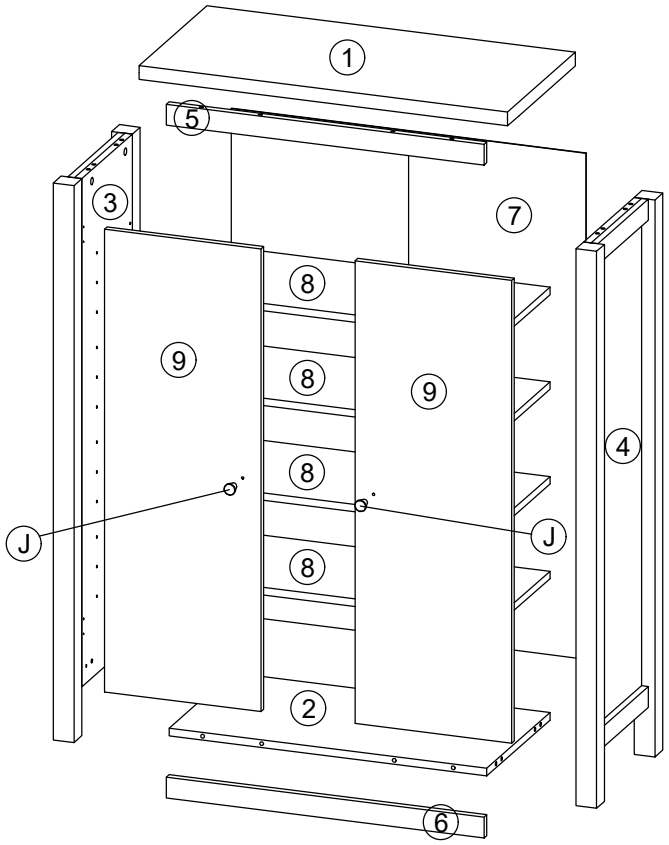

CODING
- 332002

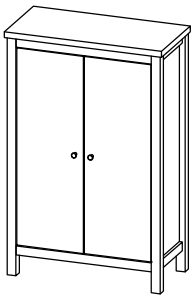

ISO 9001:2015

nuhoom.com

STEP 1
- Insert hardware **A2** onto panel **(1)** and **(6)**.
  (Repeat 8 times.)

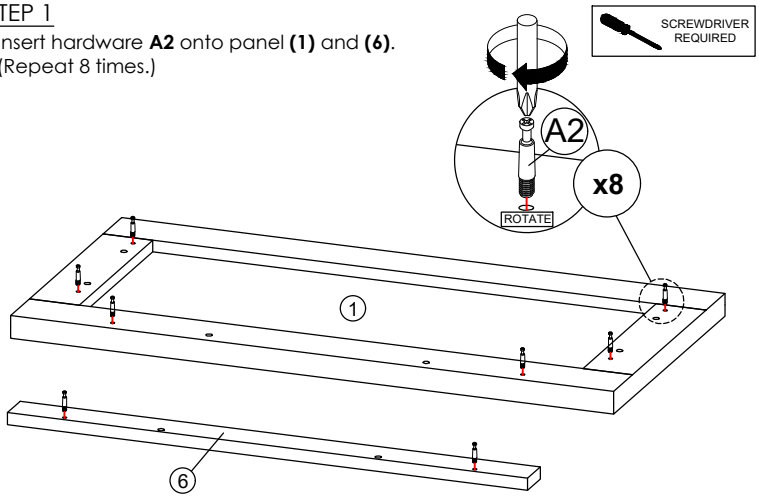

STEP 2
- Insert hardware **A1** onto panel **(2)** and **(5)**.
  (Repeat 8 times.)
- Insert hardware **B** onto panel **(2)** and **(5)**.
  (Repeat 8 times.)
- Hit hardware **I** onto panel **(2)**.
  (Repeat 2 times.)

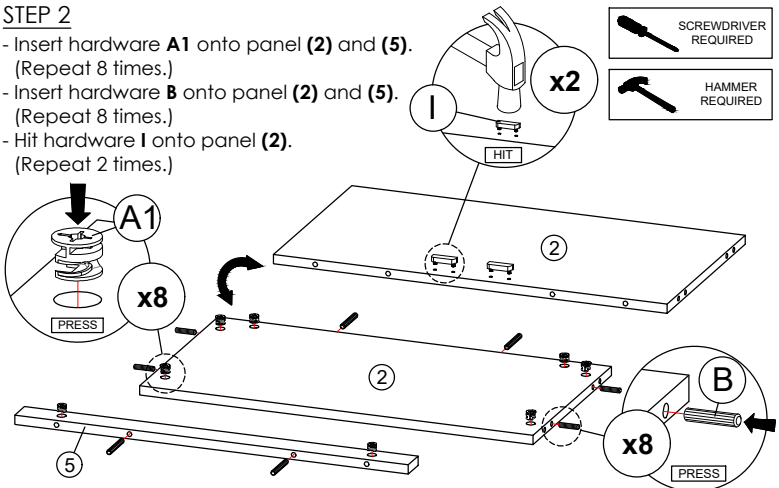

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3
- Insert hardware **A1** onto panel **(3)** and **(4)**.
  (Repeat 4 times.)
- Insert hardware **A2** onto panel **(3)** and **(4)**.
  (Repeat 4 times.)
- Insert hardware **B** onto panel **(3)** and **(4)**.
  (Repeat 4 times.)

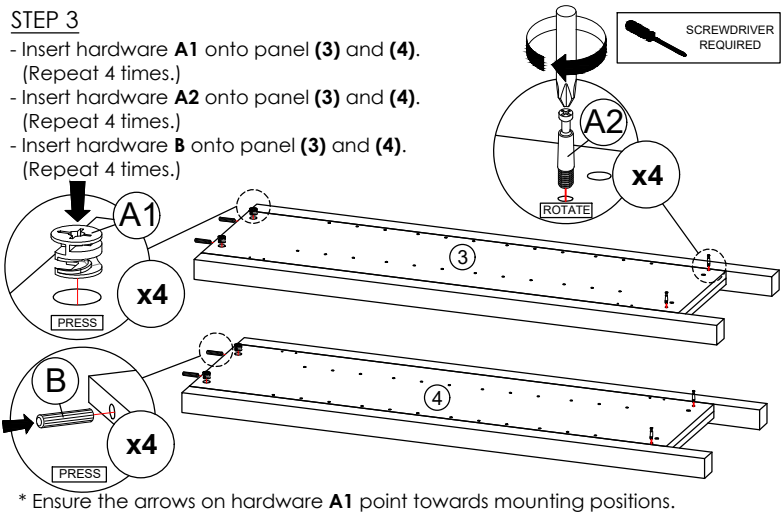

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 4
- Attach panel **(5)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 2 times.)

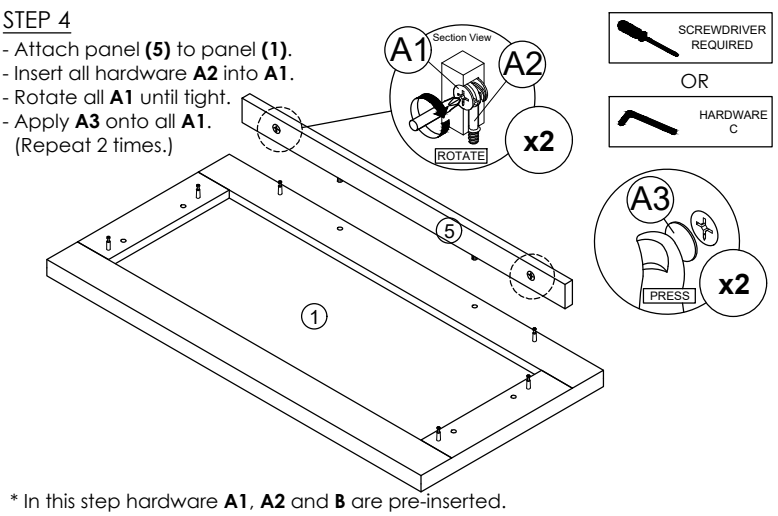

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 5
- Attach panel **(6)** to panel **(2)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 2 times.)

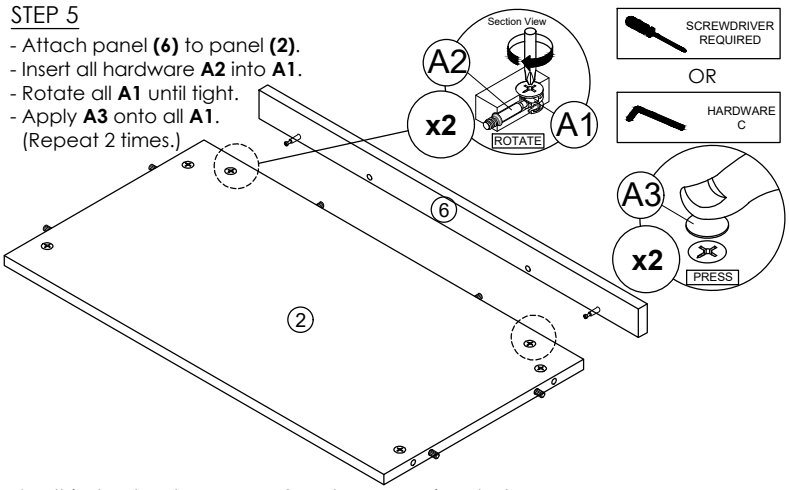

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 6
- Attach panel **(3)** and **(4)** to panel **(2)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

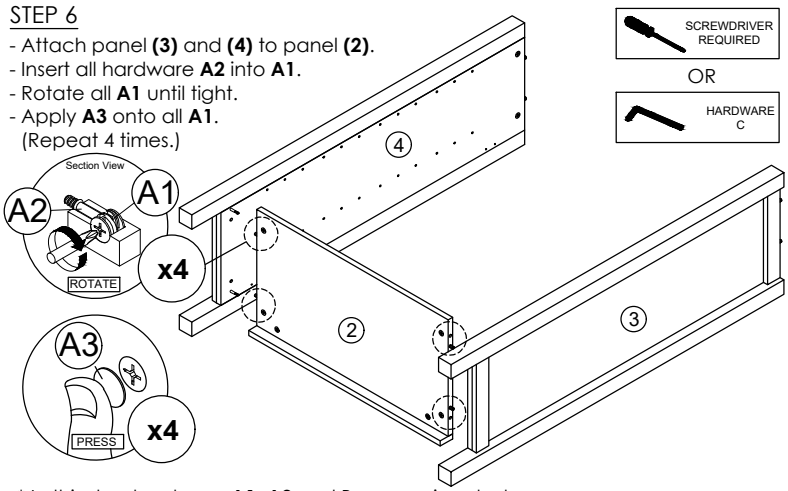

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

CODING
- 332002

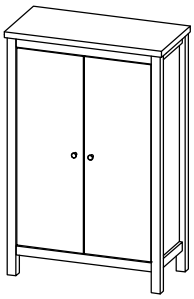

ISO 9001:2015

nuhoom.com

STEP 7
- Attach panel **(1)** to panel **(3)** and **(4)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

SCREWDRIVER REQUIRED
OR
HARDWARE C

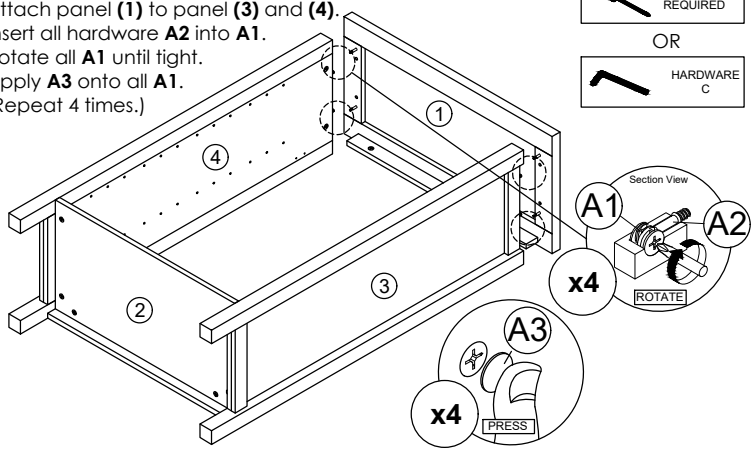

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 8
- Assemble panel **(7)** to entire body with hardware **F**.
  (Repeat 24 times.)
- Hit hardware **G** into bottom of panel **(3)** and **(4)**.
  (Repeat 4 times.)

HAMMER REQUIRED

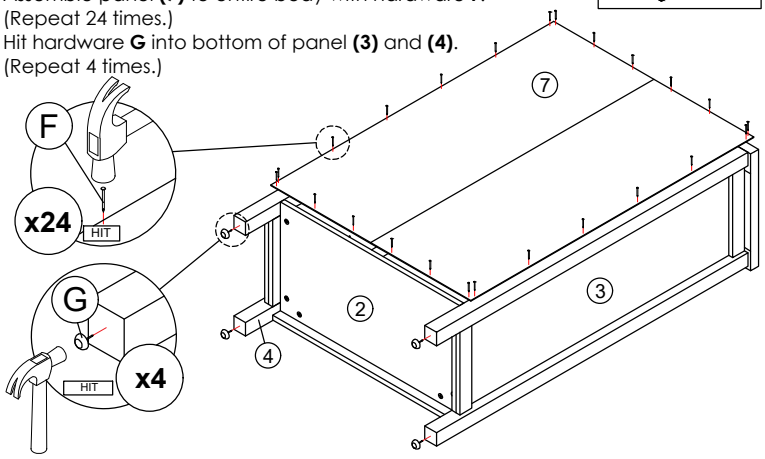

STEP 9
- Insert hardware **H** into mounting positions on panel **(3)** and **(4)** by hand.
  (Repeat 16 times.)

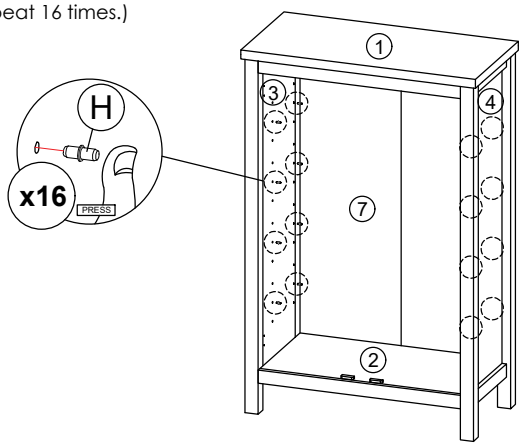

STEP 10
- Assemble panel **(8)** into between panel **(3)** and **(4)**.
  (Repeat 4 times.)

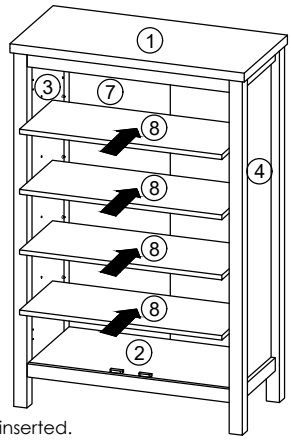

*In this step hardware **H** are pre-inserted.
*Hardware **H** can fix to another up and down hole on panel **(3)** and **(4)** for adjust panel **(8)** to high or lower.

STEP 11
- Fix hardware **K** onto panel **(9)** by using hardware **D**.
  (Repeat 2 times for each hardware.)
- Fix hardware **J** onto panel **(9)** by using hardware **E**.
  (Repeat 1 times for each hardware.)

SCREWDRIVER REQUIRED

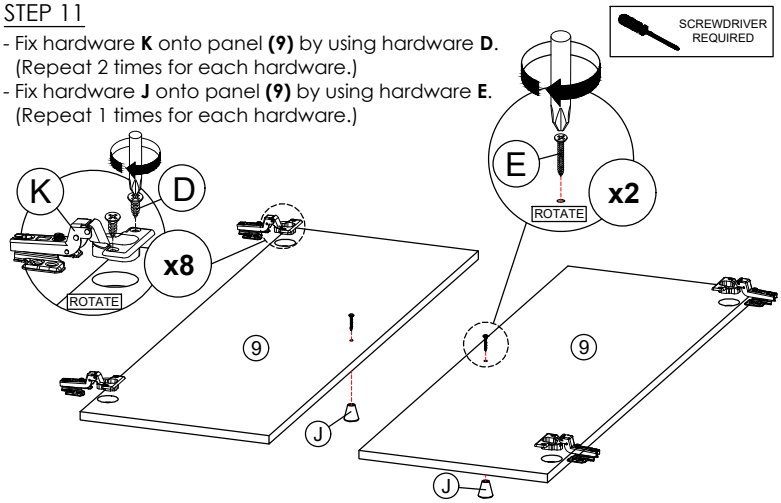

STEP 12
- Fix hardware **K** into panel **(3)** and **(4)** by using hardware **D**.
  (Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel **(9)**.
  (Do only when needed.)

SCREWDRIVER REQUIRED

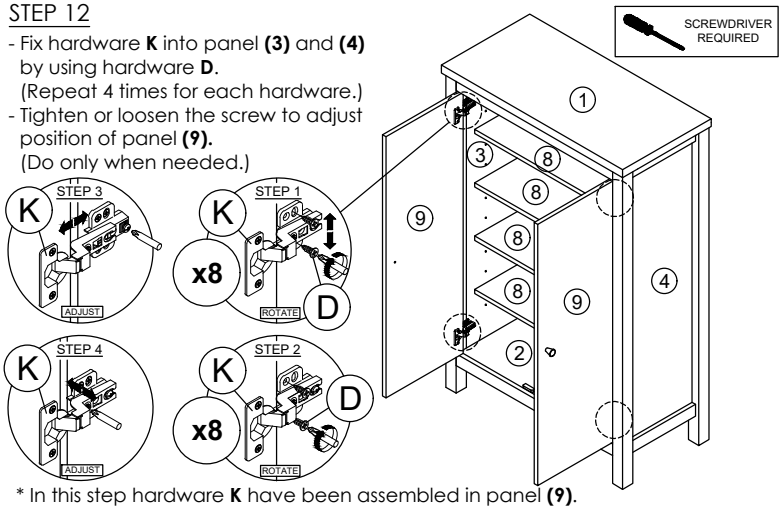

* In this step hardware **K** have been assembled in panel **(9)**.